

热释电人体红外传感器使用说明书

型号: XKC-003K4



 


XKC-003K4

1. : ,
2. (,): ,
- 3.

 
	DC5-12V
	< 200uA
	(3.3V/ 0V) /NPN/ (/) / 2A LED
	L /H ()
	5S (5-300S)
	1S
	32mm*24mm
	52L*36W*23H mm (), Φ 2.5
	28 cm
	< 110
	7
	-20~ 85
	:23mm ()

序号	型号	输出信号
1	XKC-003K4-V	(3.3V/ 0V) < 3mA
2	XKC-003K4-N	NPN () < 300mA
3	XKC-003K4-M	() 3A
4	XKC-003K4-MC	() 3A
5	XKC-003K4-LED 2A	LED 2A

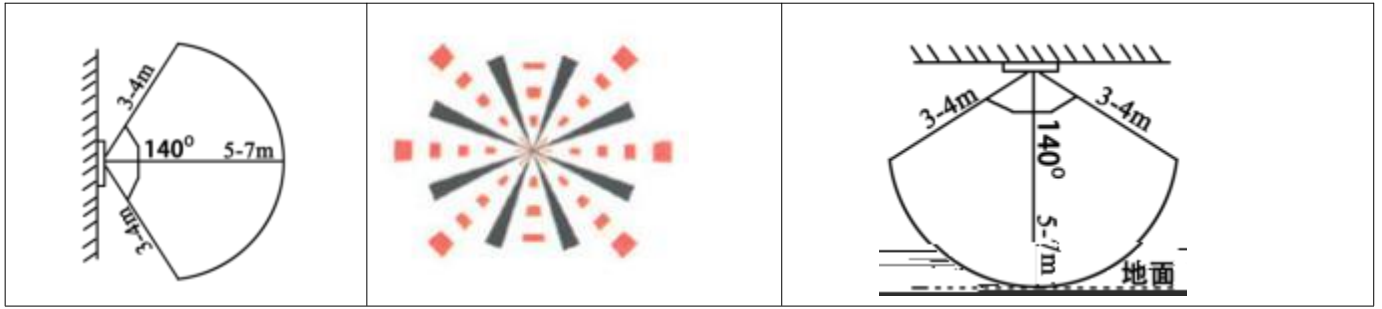 


 
 
 
<p>XKC-003K4-V XKC-003K4-N</p>	<p>XKC-003K4-M XKC-003K4-MC</p>	<p>XKC-003K4-LED 2A</p>	
			

1. : 51.5mm(L)*52.6mm(W)*32.5mm(H) (003K4-V/NPN/M/MC)

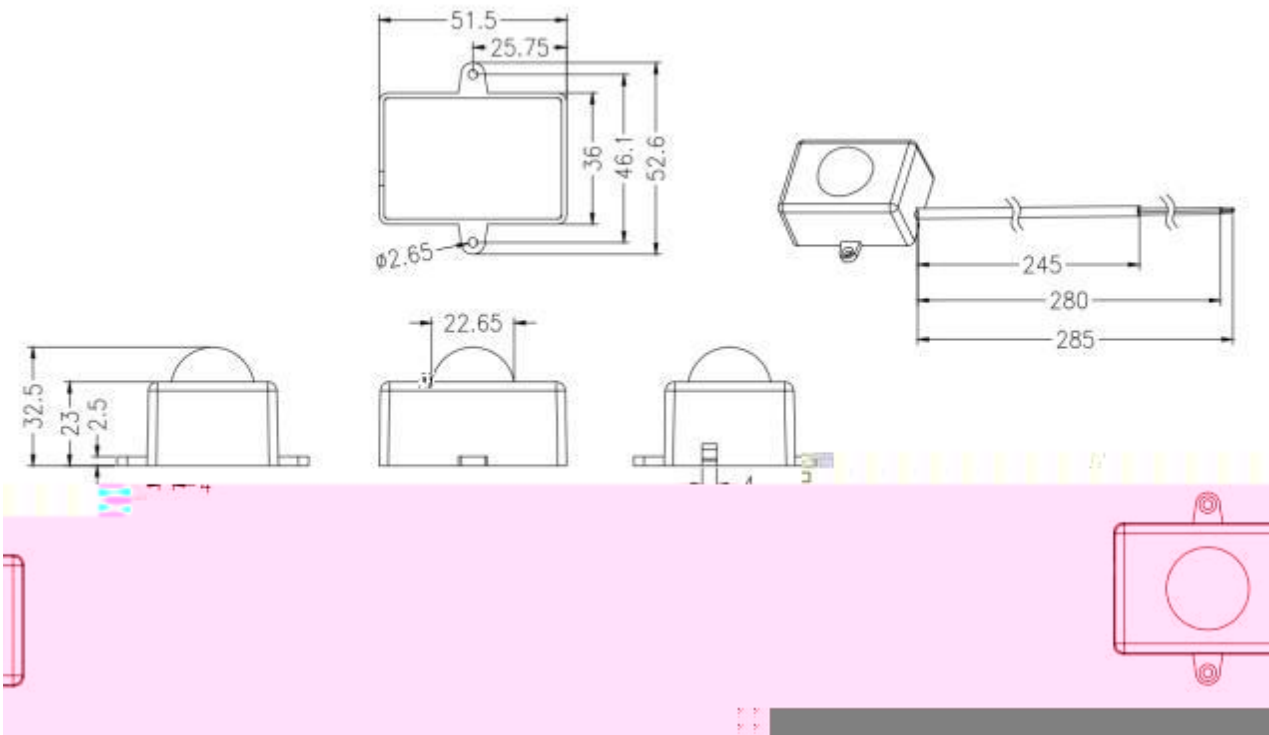

 
 
2. XKC-003K4-LED 2A

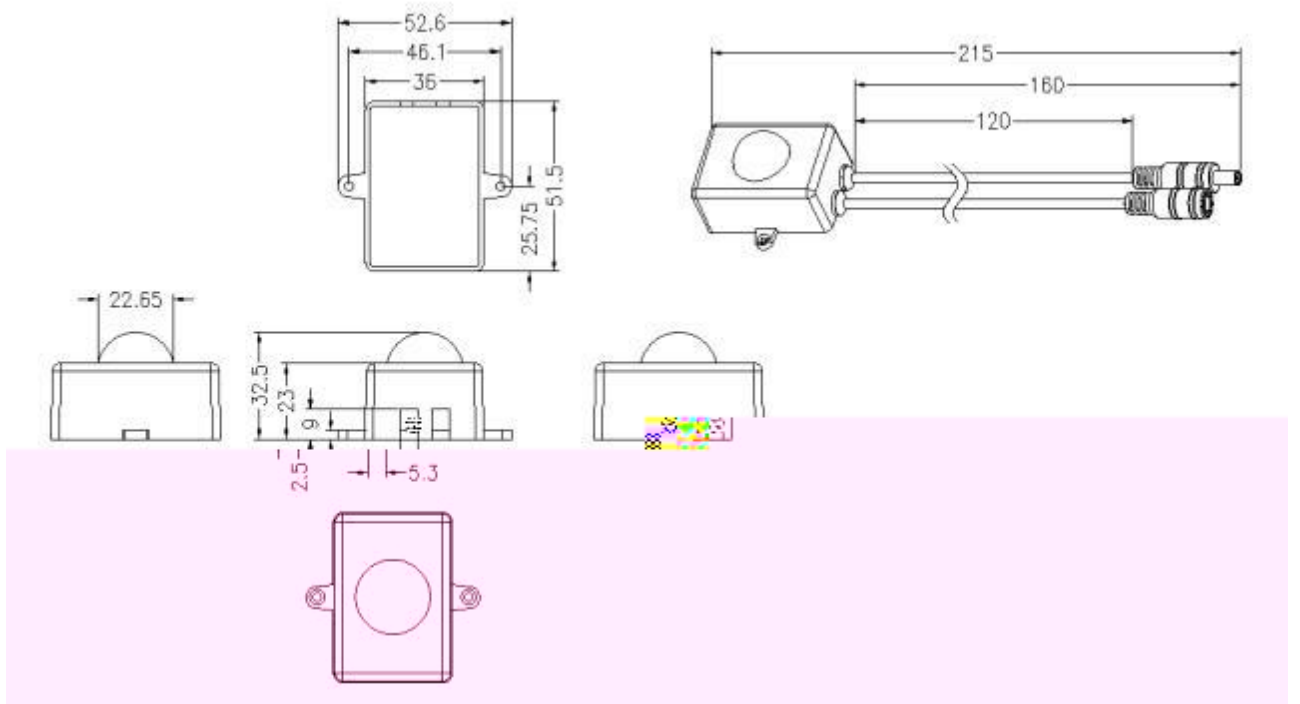

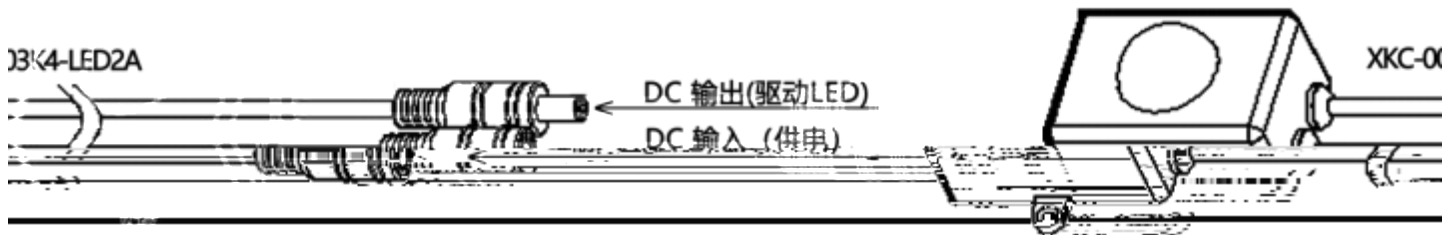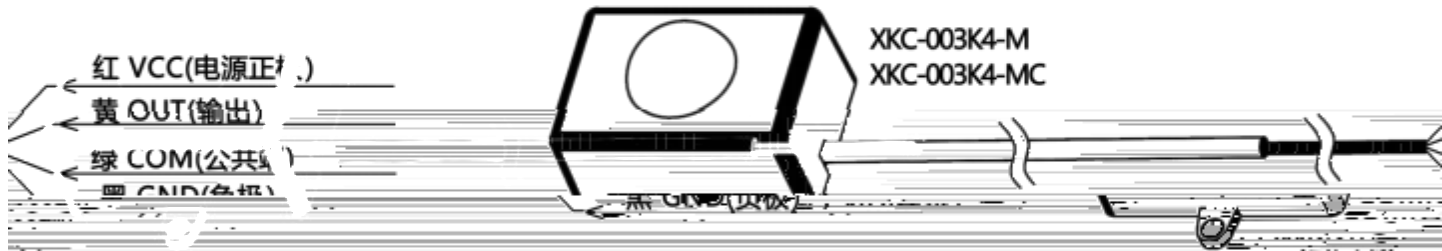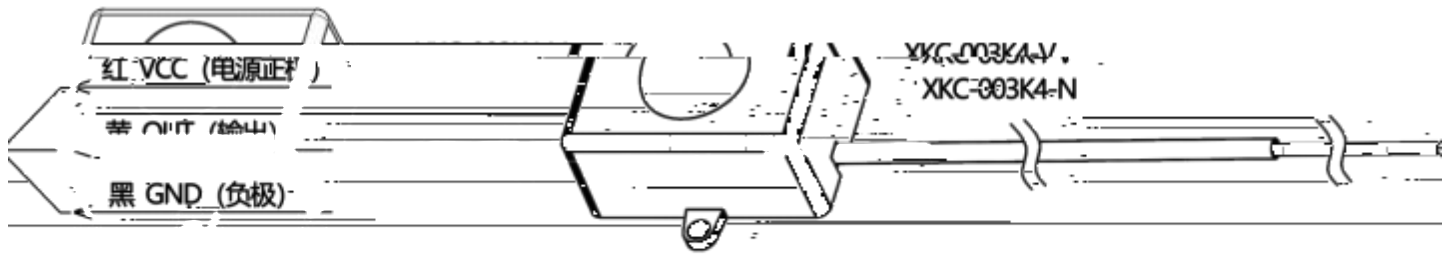 


(3);
(5S);

(7);
(300S);

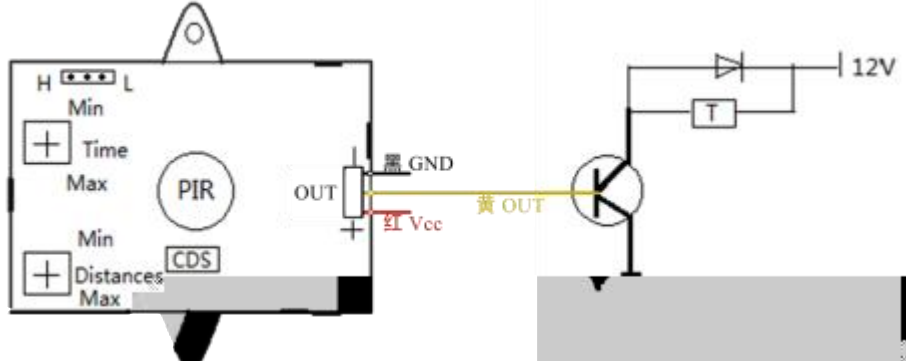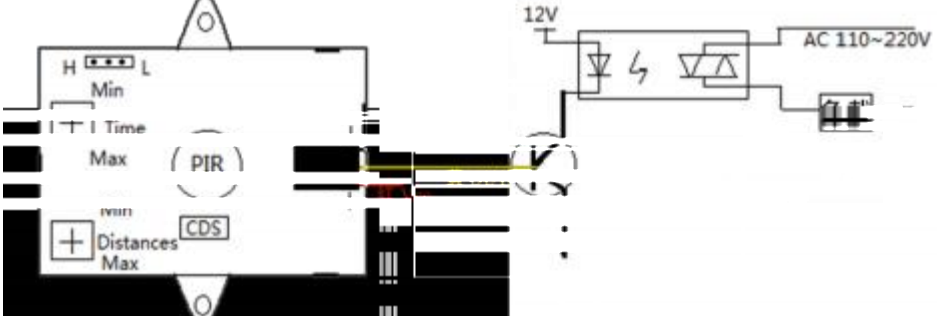1.		1. ; 2.OUT ; 3. ; 4.L ; H ; 5.CDS ; 6.Time ; 7.Distances
2.		
3.		

()

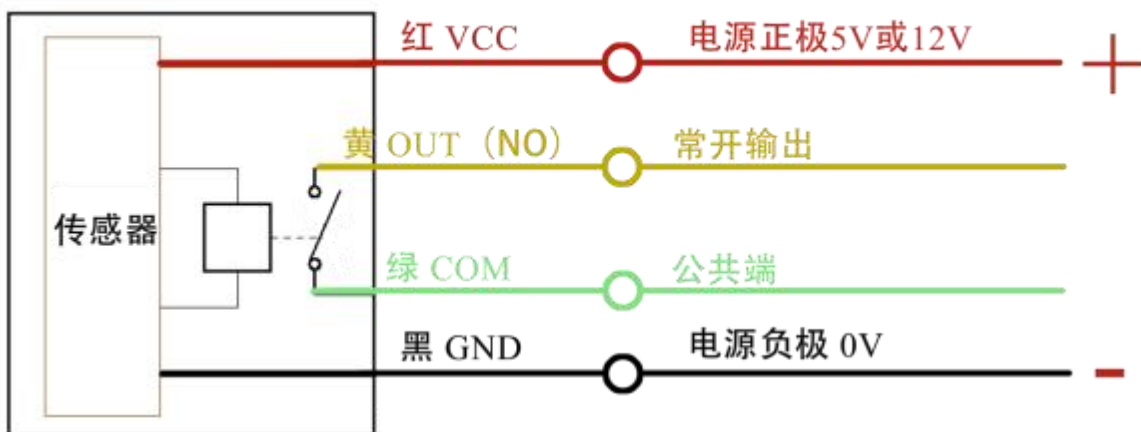

()



1. 0-3 ;
2. ;
3. ;
4. (30~32), ;

()

1. ; ;

2. (DOA) 7 DOA ;

() ;

()

1. / /

2.

3.

()

()

()